

SUPERSTAND

SELFIE STICK

STRUCTURE



PRODUCT SPECIFICATIONS

Product Code : KDM-SuperStand	Wireless Version: V5.4
Battery Capacity : 55mAh	Tensile Length : 29.5cm-1.80m
Product Weight : 425g	Phone Width : 65-90mm
Charging Port : Type-C	Charging Time : About 30 Min.

DETACHABLE WIRELESS REMOTE CONTROL

Slide the remote control up to move it out.



RECHARGEABLE BATTERY

Use Type-C cable for charging wireless remote control battery.



CLIP ROTATION



Flip freely and shoot horizontally & vertically from multiple angles.

STABLE OPERATION



Ensures stablity while clicking pictures

360° ROTATING PAN TILT



Take a panoramic picture with ease

HOW TO OPEN THE FOUR LEG BRACKET



Gently pull out each leg from the base, one by one, until you feel resistance. Ensure all four legs are fully extended and evenly spaced to form a stable base.

HOW TO USE

1. Power On

Long press the multi-function for 3 seconds. The indicator light will flash, indicating that the device is in pairing mode.

2. Wireless Pairing

Enable wireless on your phone and search for "KDM-SuperStand." Tap to connect. Once successfully connected, the indicator light will turn off.

3. Taking Photos

Open your phone's camera app. When the remote control is connected, press the multi-function to take a photo. The indicator light will flash when a picture is taken.

4. Auto Shutdown (Not Connected)

If the remote is not connected and remains idle, it will automatically power off after approximately 5 minutes.

5. Auto Shutdown (Connected)

If connected to a phone but left inactive, the remote will also shut down automatically after about 5 minutes.

6. No Connection Status

When not connected, the indicator light will keep flashing.

7. Manual Shutdown

To turn off the device manually, long press the multi-function for 3 seconds. The indicator light will turn off.

8. Auto Reconnect

The remote control supports memory pairing. Once paired, it will automatically reconnect to your phone when wireless is enabled.

REMOTE CONTROL OPERATION

- 1. In photo mode of camera-app, single-click to take a photo.
- In video mode of camera-app, single-click to start recording and click again to end recording.
- In non-photography apps, the remote control can be used to increase volume.

Troubleshoot Remote Control Operation Issues (No response/Increasing volume/Adjusting focus)

- Open the camera-app.
 Swipe left or find the camera settings.
- 3 Click the volume button action
- 4. Set the volume button action to shutter (Do not select zoom or focus).

Note: The settings of some mobile cameras may be different.

Troubleshoot Remote Control Wireless Pairing Issues

- Turn on the wireless of the mobile phone and clear some of the of the paired devices.
- 3. Turn off and restart the wireless remote control.

Shutdown & restart your phone.

normally.

- Enable wireless of your mobile phone and search for "KDM-SuperStand" and click to pair. When the interface displays "Connecting/Pairing", press remote control button quickly and continuously to connect
- Activation is only required when connecting for the first time. After that, it will connect automatically and can be used normally.





Scan QR Code To Join The KDM Community.

www.kdmindia.in

