

KDM[®]

PREMIUM MOBILE ACCESSORIES

KDM-66


INFINITE

WIRELESS SPEAKER

SPECIFICATION


Product Code	: KDM-66
Wireless Version	: V5.4
Transmission Distance	: 10M
Output Power (RMS)	: 20W
Speaker Size	: 4inch*2
Frequency Range	: 80Hz-12KHz
S/N	: ≥80dB
Charging Time	: 150 Minutes
Battery Capacity	: 4500mAh
Music Time	: Up To 7 Hours*
Charging Port	: Type-C
Support	: TF, AUX, USB, FM, TWS

STRUCTURE

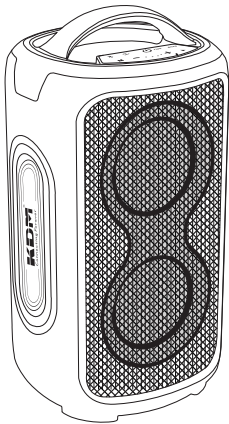


WIRELESS PAIRING

- Power on the speaker, it **will** automatically enter wireless pairing mode.
- Go to wireless settings of your device and search for "**KDM-66 INFINITY**", tap on it, once connected will hear a prompt sound. Or If a prompt appears on the screen for pairing, enter the code "0000" and tap confirm to pair.
- When speaker is used again, it automatically connects to your last paired device.

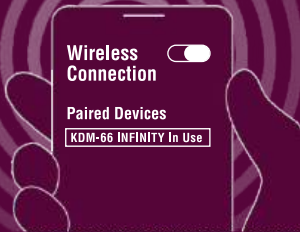



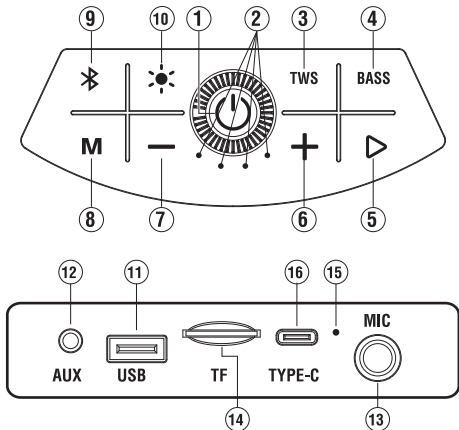

FUNTIONALITY




PRODUCT FEATURE

(SUBJECT TO THE ACTUAL PRODUCT)

1. [] Long press to power on/off.
2. [**White light**] : Battery indicator.
3. [**TWS**]: Single Press to enter into TWS function, Single Press again to disconnect TWS.
4. [**BASS**]: Single Press can enhance the bass effect.
5. []: Single Press to play/pause.
6. [**+**]: Single Press to increase volume. Long press to play the next music when playing music.
7. [**-**]: Single Press to decrease volume. Long press to play the previous music when playing music.
8. [**M**]: Single Press mode conversion: Wireless mode, FM mode, AUX mode, U disk mode, TF card mode,
9. []: Single Press to quickly enter the Wireless mode, Single Press again to directly disconnect the Wireless connection.
10. []: Single Press to turn on the ambient light, long press to turn off the ambient light directly.
11. [**USB**]: Insert U disk to play MP3 music.(Max workable capacity for USB is 64 GB, if more than 64 GB it can not work)
12. [**AUX**]: AUX audio input.
13. [**MIC**]: Insert wired microphone to sing.
14. [**TF**]: Insert TF card to play MP3 music.(Max workable capacity for TF Card is 64 GB, if more than 64 GB it can not work)
15. [**Charging indicator**]:The red light is on when charging, the red light is off when fully charged and the green light is on.
16. [**TYPE-C**]: Charging jack, you can use the special Type-C charging cable distributed by the unit, connect to the adapter for charging.


1+1 TWS OPERATION

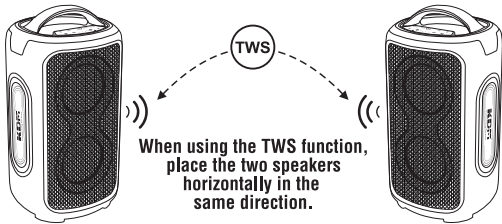

1. When using the TWS function, place the two speakers horizontally in the same direction.
2. In Wireless mode, turn on the two Wireless speaker device at the same time, and then turn on any speaker and Single Press " **TWS** " key to pair with another speaker to connect, Single Press again the " **TWS** " key to disconnect TWS.
3. The optimal connection distance between two Wireless speakers is about 5 meters.

WIRELESS MICROPHONE OPERATION

1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left and replace the AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. Howling: Please do not put the microphone close to the speaker device. Please try to put the microphone a little bit away from or the back of the speaker device, or try to turn down the volume of microphone.
5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turned up to the maximum.

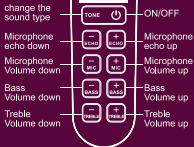

TROUBLESHOOTING

- 1. Automatically shut down when turned on**
The battery is low, please fully charge it before use.
- 2. The player automatically shuts down or restarts**
The battery is low, please fully charge it before use.
- 3. The charging light is not on, not charging**
Pls make sure the charging cable is plugged in properly and whether it is damaged or normal, please use a 5V==2A charger to charge the device.
- 4. Wireless status is silent**
Pls make sure the Wireless is paired correctly, and the Wireless device is playing, and the volume is not at the minimum.
- 5. TF card/U disk playback is silent**
Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The music in the TF card/U disk mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.
- 7. Long-term charging should not exceed 15 hours.**
If the device is charged for more than 15 hours, the charging light will begin to alternate between red and green, indicating that charging has completed.
- 8. If the device cannot turn on or off.**
A reset key is located DEEP INSIDE the AUX port. If the device fails to power on or off normally, insert a thin object (e.g., a paperclip) into the AUX port to activate the reset button and restart the system.

Charging Instruction

1. To protect the performance of the battery, avoid using the speaker while charging.
2. Note: The speaker has no power bank function, it is forbidden to connect other devices through the USB interface.
3. Connect the charging cable to the type-c of 5V \leq 2A and plug it into the charging port after the speaker is turned off. the red light is on when charging, and the red light is off when fully charged, and the green light is on.



**KARO
DIL KI
MARZI**

with
KDM[®]
PREMIUM MOBILE ACCESSORIES



@KDMINDIA

Scan QR Code
To Join The KDM Klub.

www.kdmindia.in