



KDM[®]
PREMIUM MOBILE ACCESSORIES

 
KDM-88
Volcano
WIRELESS SPEAKER

SPECIFICATIONS

Product Code	:	KDM-88
Wireless Version	:	V5.3
Battery Capacity	:	4500mAh
Transmission Distance	:	10m
Music Time	:	Up To 7 Hours*
Output Power	:	2*15W
Speaker Size	:	2*4 Inch
Frequency Response	:	80Hz-12KHz
S/N Ratio	:	≥80dB
Support	:	USB, TF, AUX, FM, TWS
Charging Time	:	1A=2-2.5H, 2A=1.5-2H
Charging Type	:	Type-C

**At 40% to 60% volume*

STRUCTURE

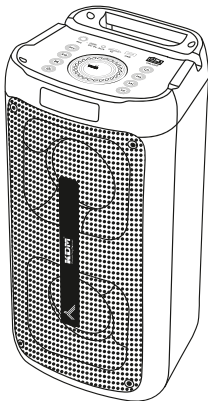


WIRELESS PAIRING

1. Power on the speaker, it will automatically enter wireless pairing mode.
2. Go to wireless settings of your device and search for "KDM-88 Volcano", tap on it, once connected will hear a prompt sound. Or If a prompt appears on the screen for pairing, enter the code "0000" and tap confirm to pair.
3. When speaker is used again, it automatically connects to your last paired device.



 FUNCTIONALITY

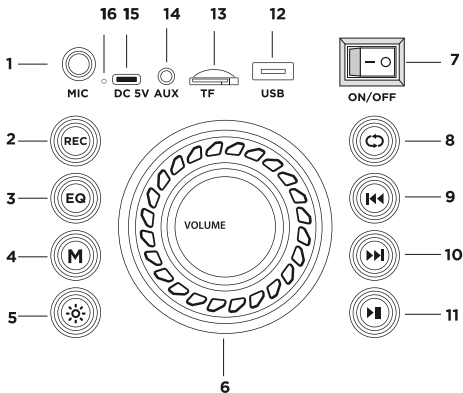

FUNCTIONALITY

- 1 [MIC] : Plug in the microphone.
- 2 [REC] : In the state of U disk/TF card, insert the microphone, or turn on the wireless microphone, single-click to record, the screen will display REC, then single-click to play the recording, long press to delete the recording file while playing, and displayed dEL.
- 3 [EQ] : Single-click to switch EQ mode, EQ0 (outdoor sound when power on); EQ1 (indoor sound).
- 4 [M]: Single-click to switch between Wireless/TF Card/U disk/FM mode. Long press to automatically search for channels when in FM mode.
- 5 [※] : Single-click to switch the lighting effect. There is only one lighting effect in the FM radio state.
- 6 [VOLUME] : Turn left to decrease volume, turn right to increase volume.
- 7 [ON/OFF] : Power ON/OFF.
- 8 [↻] : In music mode, single-click for single loop [ONE] all loop [ALL].

FUNCTIONALITY

- 9 [⏮] : Single-click for previous song/select the previous radio station, long press to rewind.
- 10 [⏭] : Single-click for next song/select the next radio station, long press to fast forward.
- 11 [⏸] : Single-click for play/pause, and long press to automatically search for channels in FM mode.
- 12 [USB] : Insert the U disk to play MP3 music.
- 13 [TF] : Insert the TF card to play MP3 music.
- 14 [AUX] : AUX audio input.
- 15 [DC 5V] : Charging jack, insert USB charging cable connect to the charger for charging.
- 16 [Charging light] : The red light is on when charging, the red light is off when fully charged, and the green light is on.

 
WIRELESS INTERNAL RECORDING OPERATION

1. Insert the TF card or U disk, and then switch to Wireless mode.
2. After connecting to Wireless, the mobile phone will play the accompaniment music
3. Insert the wired microphone or turn on the Wireless microphone.
4. Singal-click the record button, the Wireless internal recording starts, and then singal-click the record button to complete the internal recording and start playing the internal recording file.

CHARGING INSTRUCTION


Use a 5V ==2A charger connected with usb charing cable for the device to charge, the red light is on when charging, and the red light is off when fully charged, and the green light is on. The charging time for 1A power supply is 2-2.5 hours and for 2A power supply is 1.5-2 hours.

1+1 TWS OPERATION

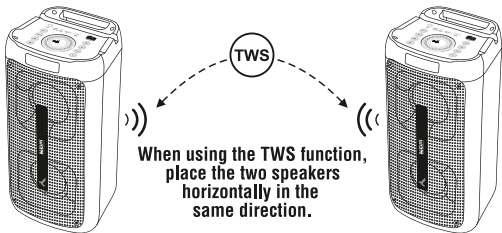


1. Turn on wireless of two KDM-88 Volcano speakers then long press M button of any of the speakers to connect both. Long press TWS button again to disconnect.
2. The optimal connection distance between two speakers is about 5 meters.

 REMOTE SCHEMATIC DIAGRAM

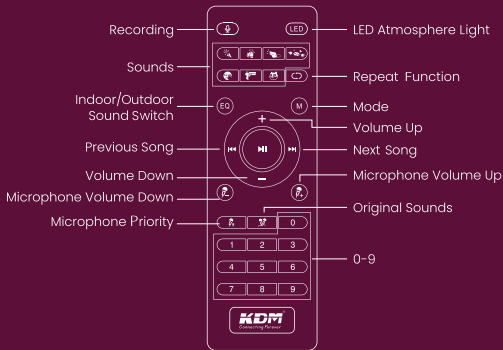

WIRELESS MICROPHONE OPERATION

 1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left and replace the AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. Howling: Please do not put the microphone close to the speaker device. Please try to put the microphone a little bit away from or the back of the speaker device, or try to turn down the volume of microphone.
5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turn up to the maximum.

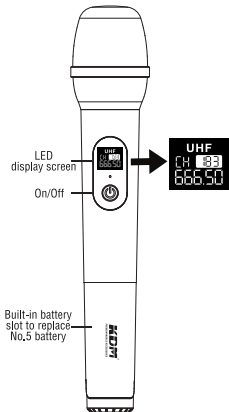

TROUBLESHOOTING

1 Automatically shut down when turned on

The battery is low, please fully charge it before use.

2 The player automatically shuts down or restarts

The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Please make sure the charging cable is plugged in properly and whether it is damaged or normal, please use a 5V == 2A charger to charge the device.

4. Wireless status is silent

Please make sure the Wireless is paired correctly, and the Wireless device is playing, and the volume is not at the minimum.

5. TF card/U disk playback is silent

Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The in the TF card/U disk mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.

TROUBLESHOOTING

6. Recording doesn't work

Whether there is space in the TF card or U disk, delete some files to reserve storage space. Recording should be in TF card mode, U disk mode and insert a wired microphone or turn on a wireless microphone.

7. The recording cannot be deleted

Please long press the record button or connect to a computer to delete it when playing the recording file.

8. The recording sound is low or there is noise

Insert a wired microphone or turn on a wireless microphone when recording.

IMPORTANT TIPS

- Do not use this product under high temperature, humidity, cold, dust, electromagnetic radiation, and lightning conditions.
- Always use genuine KDM accessories for charging to ensure safety, better performance, and longer device life.
- Charging time should not exceed the given hours.
- Recharge at least once every 30 days to preserve battery lifespan.
- Do not exceed 60 decibels to avoid hearing damage when using for along time.
- After the end of its life, the product can be sent to a professional recycling agency, do not discard it at will, so as not to pollute the environment.



@KDMINDIA

Scan QR Code
To Join The KDM Klub.

www.kdmindia.in



with
KDM[®]
PREMIUM MOBILE ACCESSORIES